


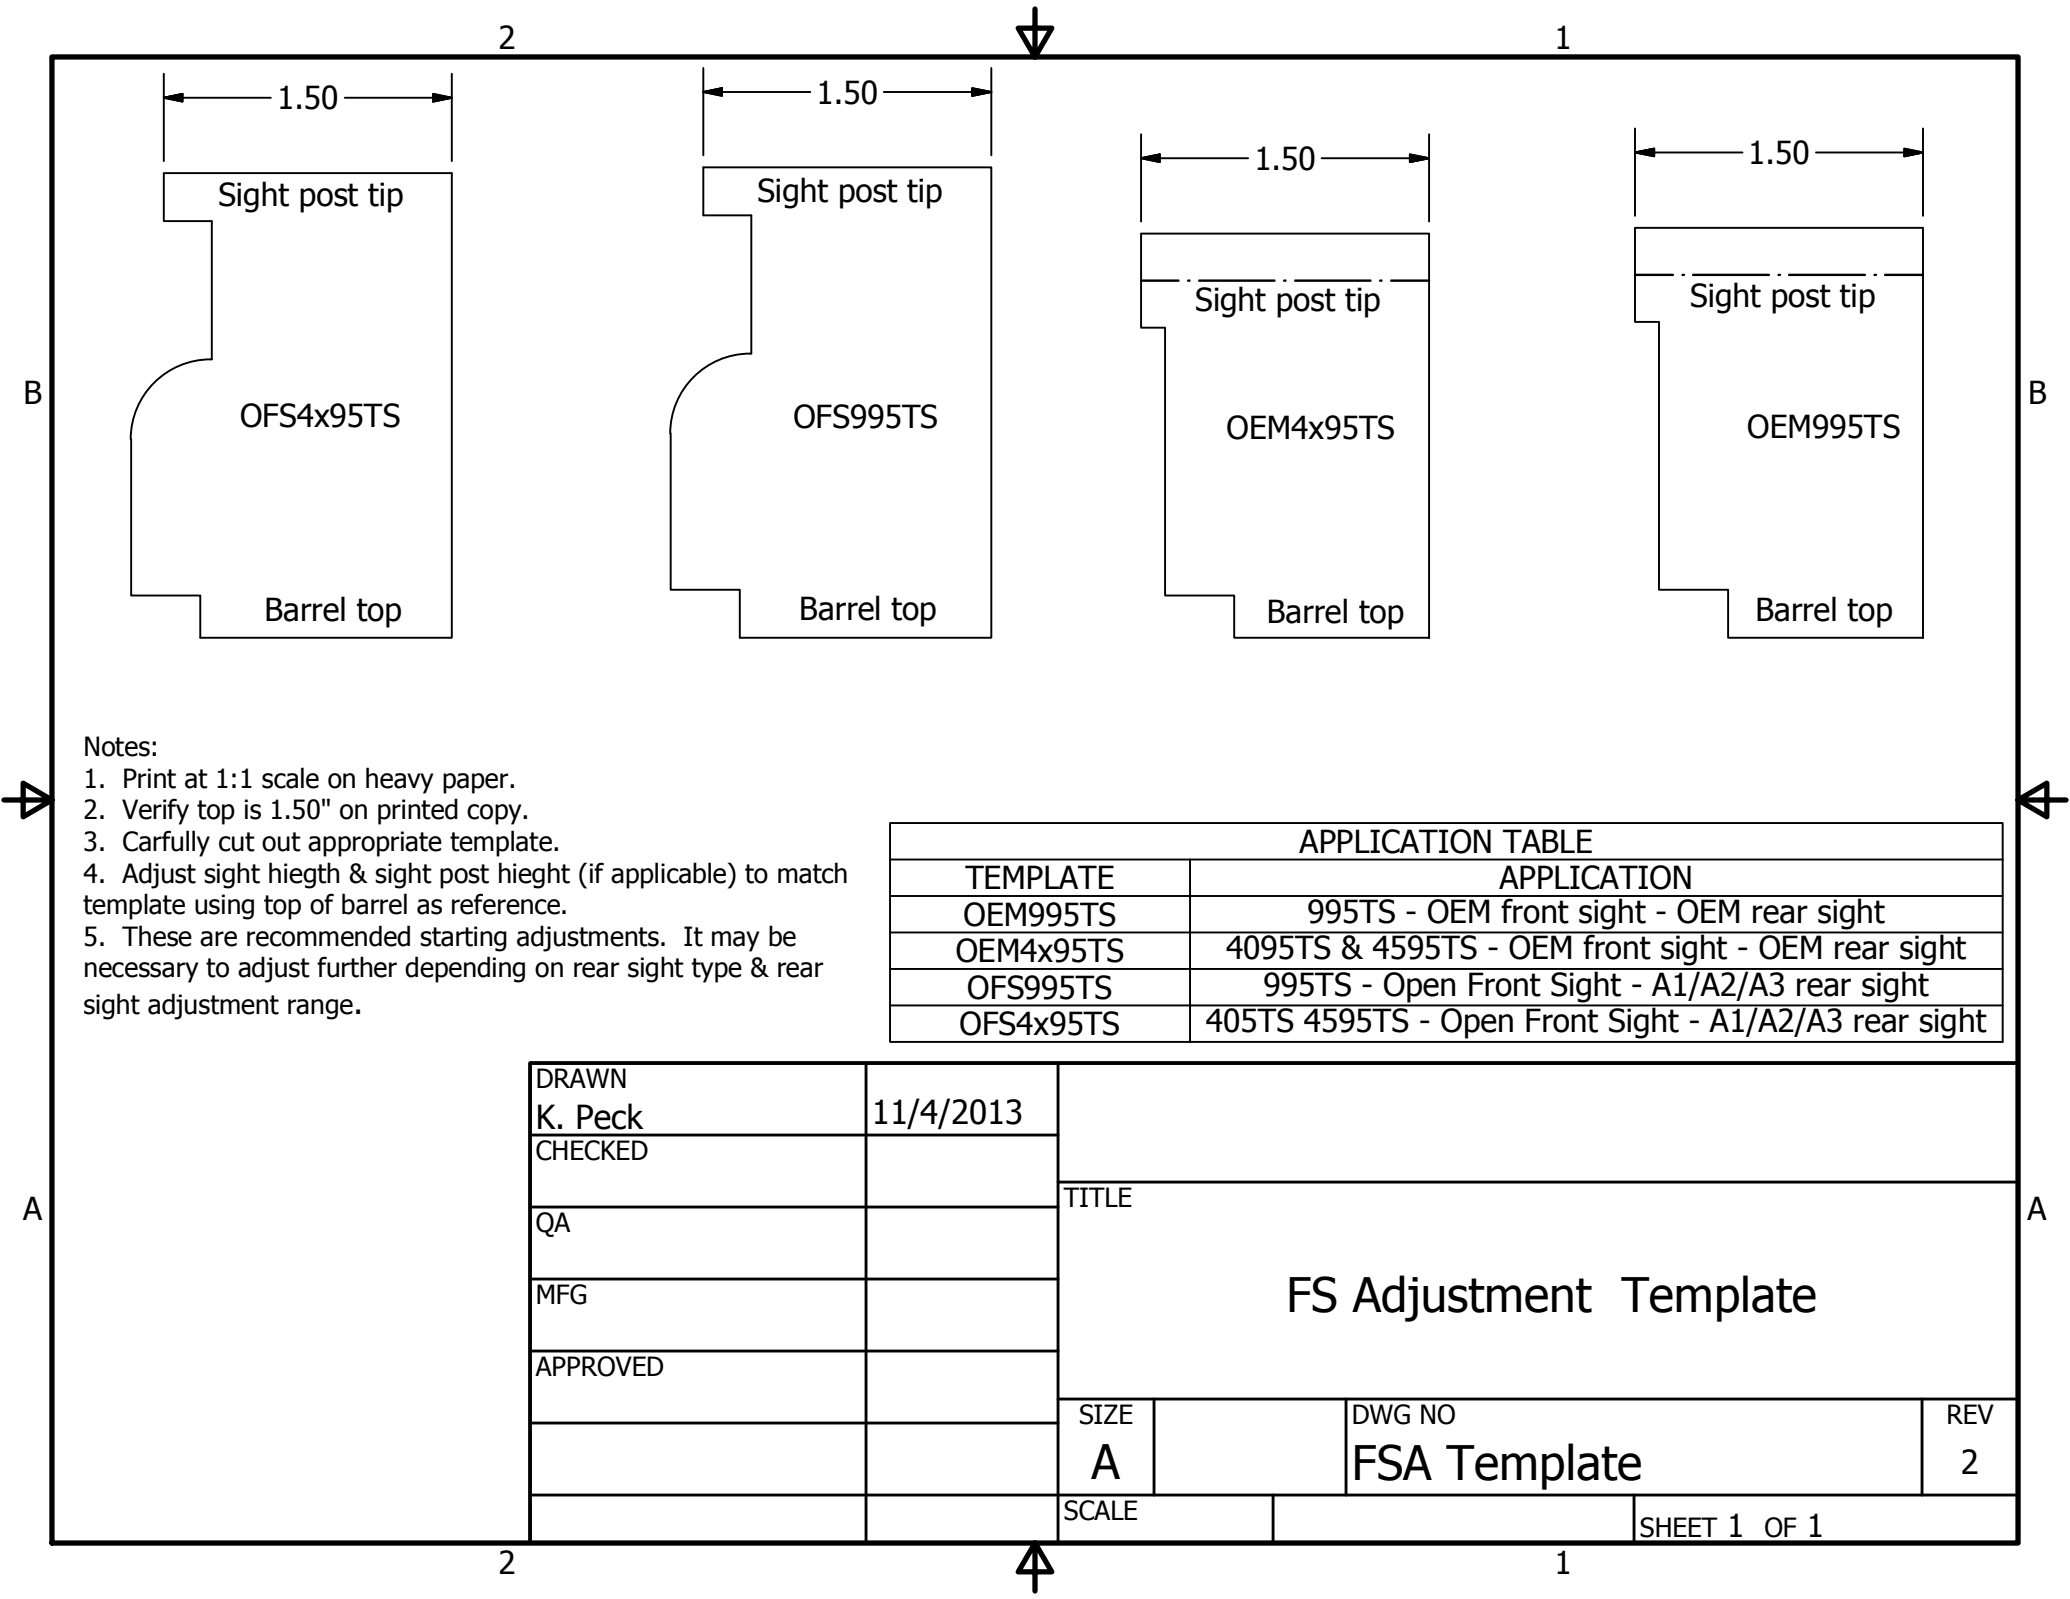

Notes:

1. Print at 1:1 scale on heavy paper.
2. Verify top is 1.50" on printed copy.
3. Carefully cut out appropriate template.
4. Adjust sight height & sight post height (if applicable) to match template using top of barrel as reference.
5. These are recommended starting adjustments. It may be necessary to adjust further depending on rear sight type & rear sight adjustment range.

APPLICATION TABLE	
TEMPLATE	APPLICATION
OEM995TS	995TS - OEM front sight - OEM rear sight
OEM4x95TS	4095TS & 4595TS - OEM front sight - OEM rear sight
OFS995TS	995TS - Open Front Sight - A1/A2/A3 rear sight
OFS4x95TS	405TS 4595TS - Open Front Sight - A1/A2/A3 rear sight

DRAWN	11/4/2013	TITLE FS Adjustment Template		
K. Peck				
CHECKED				
QA				
MFG				
APPROVED				
		SIZE A	DWG NO FSA Template	REV 2
		SCALE	SHEET 1 OF 1	